:hager



## **Rotary Potentiometer DALI, House Electronics**

## **Technical characteristics**

| Type of control unit                         | Push & rotative  |
|--|--|
| Functions                                    |  |
| Switching                                    | for switching and controlling electr. ballasts and<br>Tronic transformer with DALI/DSI interface |
| Controls and indicators                      |  |
| Operation                                    | with soft-lock   |
| Main electrical features                     |  |
| Nominal voltage                              | 16 V   |
| Frequency                                    | - Hz   |
| Voltage                                      |  |
| DALI voltage                                 | 16 V DC (9,5 22,5 V=)  |
| Fuse   |  |
| Fine-wire fuse                               | F 0.5 H 250 V  |
| Fuse   | short-circuit and overload proof (fine-wire fuse) ; with<br>spare fuse                           |
| Dimensions                                   |  |
| Axis dimension Ø                             | 4 mm   |
| Power  |  |
| Current consumption                          | < 2 mA   |
| Power supply                                 |  |
| Power supply required to DALI specifications | DIN IEC 60929 required   |
| Connection                                   |  |
| Quantity of DALI devices                     | max. 64  |
| Type of connection                           | with screw terminals   |
| Cable  |  |
| DALI cable length at 1.5 mm <sup>2</sup>     | max. 200 m   |
| Settings                                     |  |
| Setting                                      | basic brightness programmable  |

Equipment

| Control                                  | for wiring in parallel (last potentiometer setting applicable)  |
|--|---|
| Switches / socket outlets                | with on/off pressure switch   |
| Use                                      |   |
| Differentiation characteristic 3 - Sales | with soft-lock  |
| Identification                           |   |
| Application, usage                       | Light control   |
| Main design line                         | Light control   |
| Instructions                             |   |
|  | Possible to change fuse without removing cover. Not suitable for combining with other DALI sensors or |
| Information text                         | central units.  |